


POINT OF USE FAMILY WATER TREATMENT UNIT

Attachment A Shipping Mode (Not to Scale)

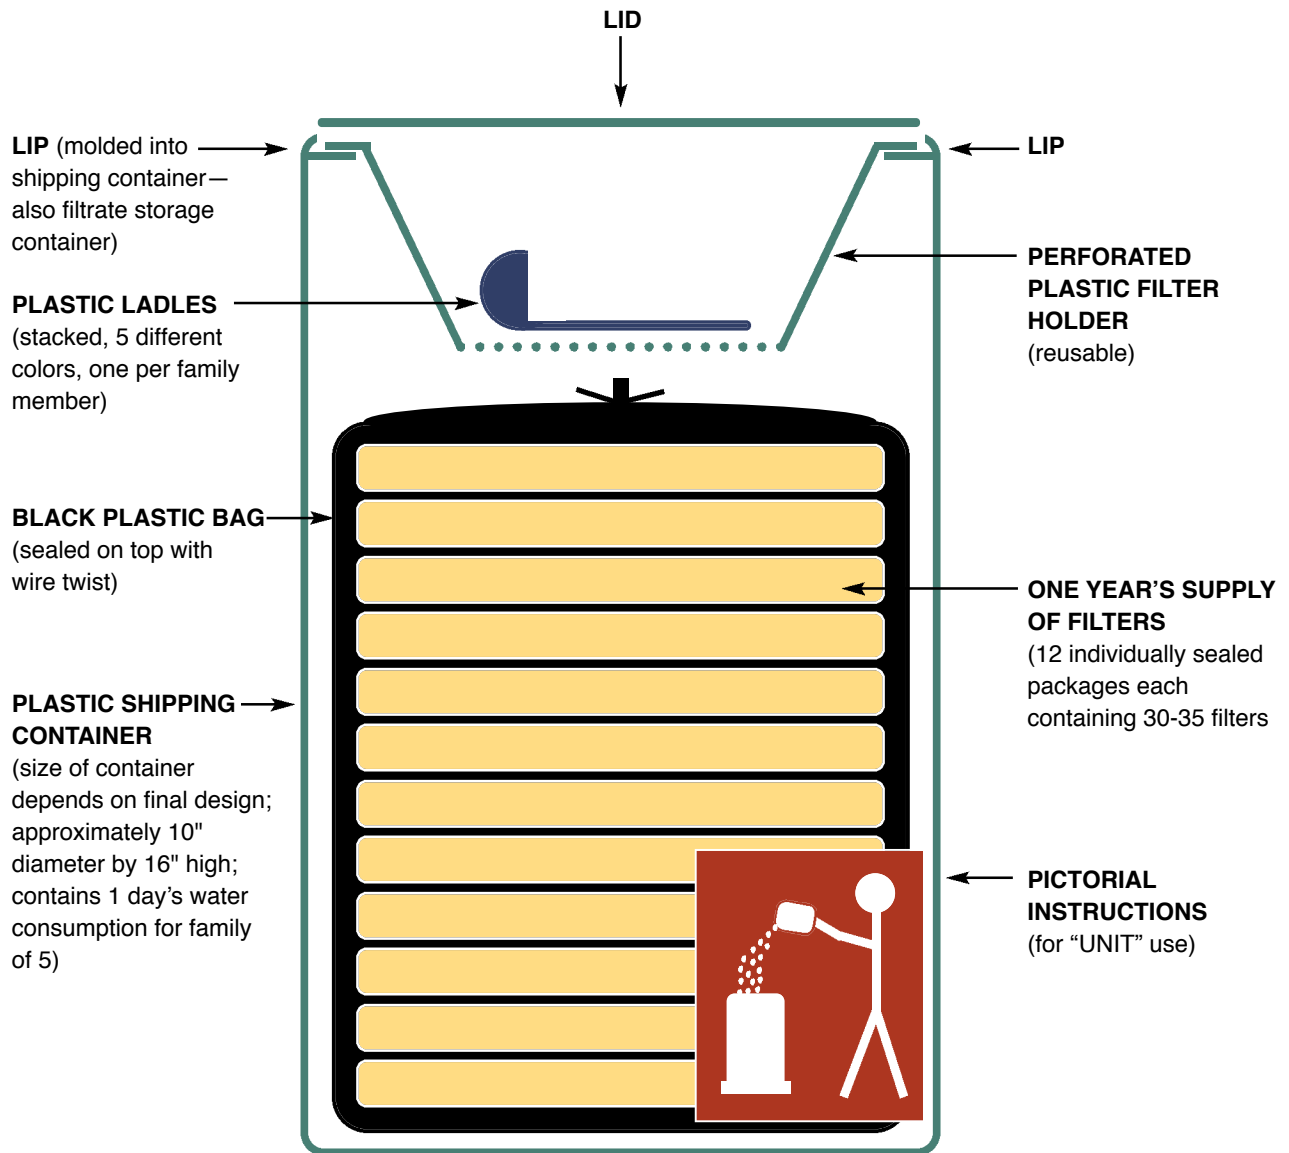


HERMETICALLY-SEALED SHIPPING PACKAGE
(consisting of 2 pieces — lid and filtrate container —
both pieces are molded plastic and reusable)


POINT OF USE FAMILY WATER TREATMENT UNIT

Attachment A


Step 1 – Disassembled
(Not to Scale)

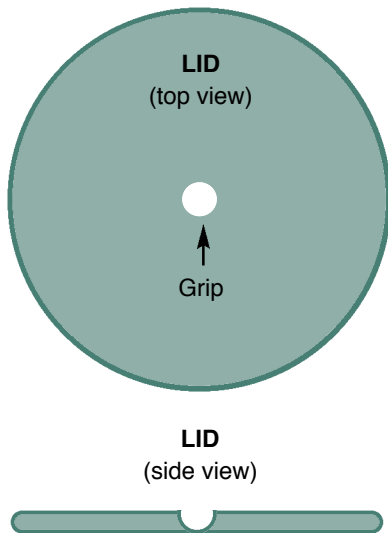

FILTER HOLDER IN PLACE AS SHIPPED
(after ladles and plastic bag with filters are removed)

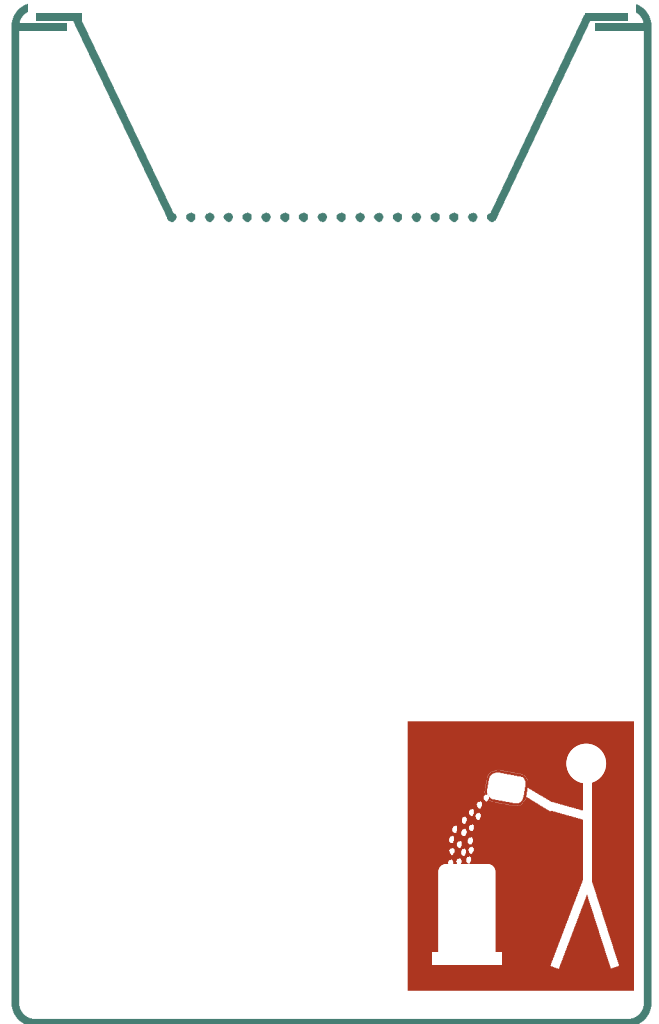

BLACK PLASTIC BAG
(all filters are removed and stored)

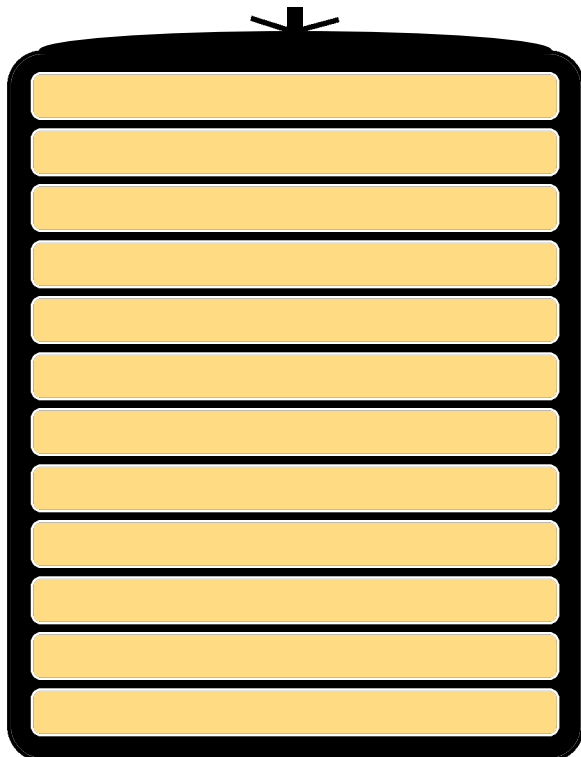

FILTRATE STORAGE CONTAINER





5 PLASTIC LADLES

POINT OF USE FAMILY WATER TREATMENT UNIT

Attachment A

Step 2 – Preparation for Use (Not to Scale)

- Open large black plastic bag and remove one package of filters
- Place one filter in filter holder
- Reseal small package of filters
- Reseal large black plastic bag

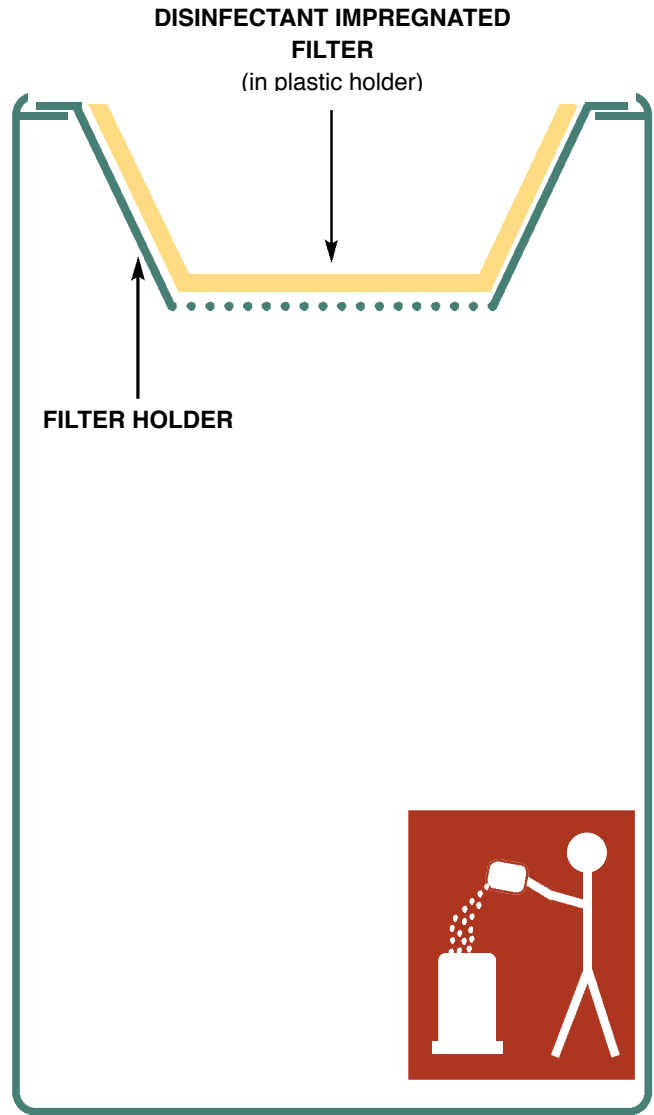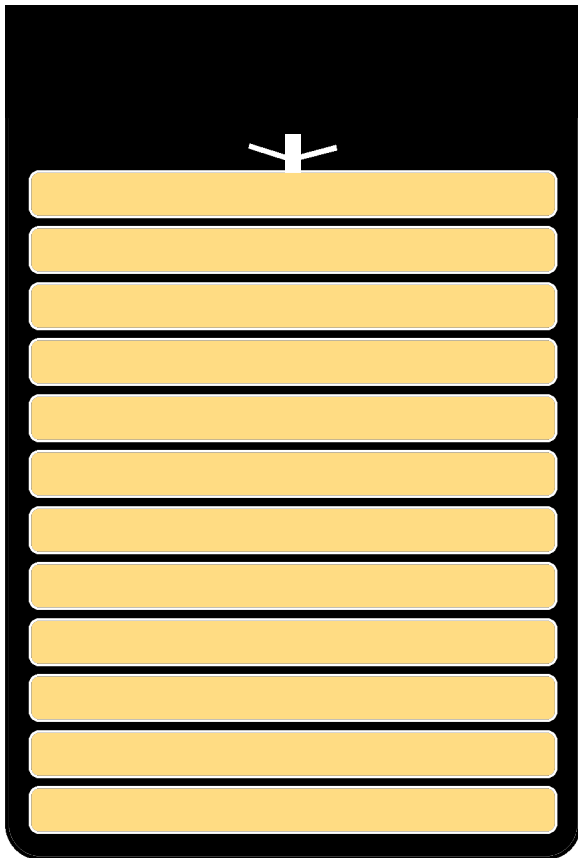


FILTRATE STORAGE CONTAINER

POINT OF USE FAMILY WATER TREATMENT UNIT

Attachment A

*Step 3 – Filtering
(Not to Scale)*

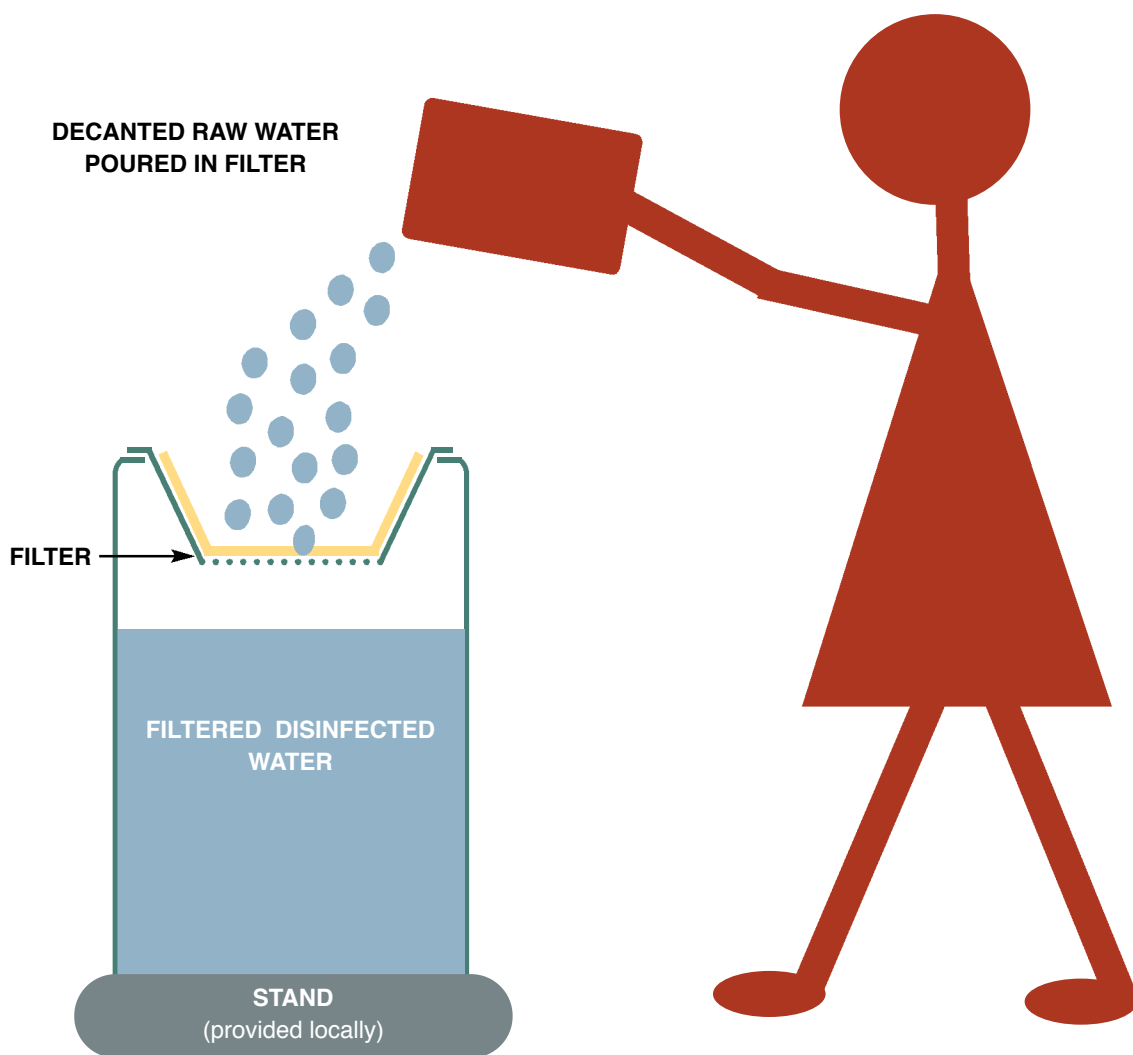


Filtered drinking-quality water held 20 minutes before consumption for disinfectant to work.

POINT OF USE FAMILY WATER TREATMENT UNIT

Attachment A

Step 4 – Unit in Use
(Not to Scale)

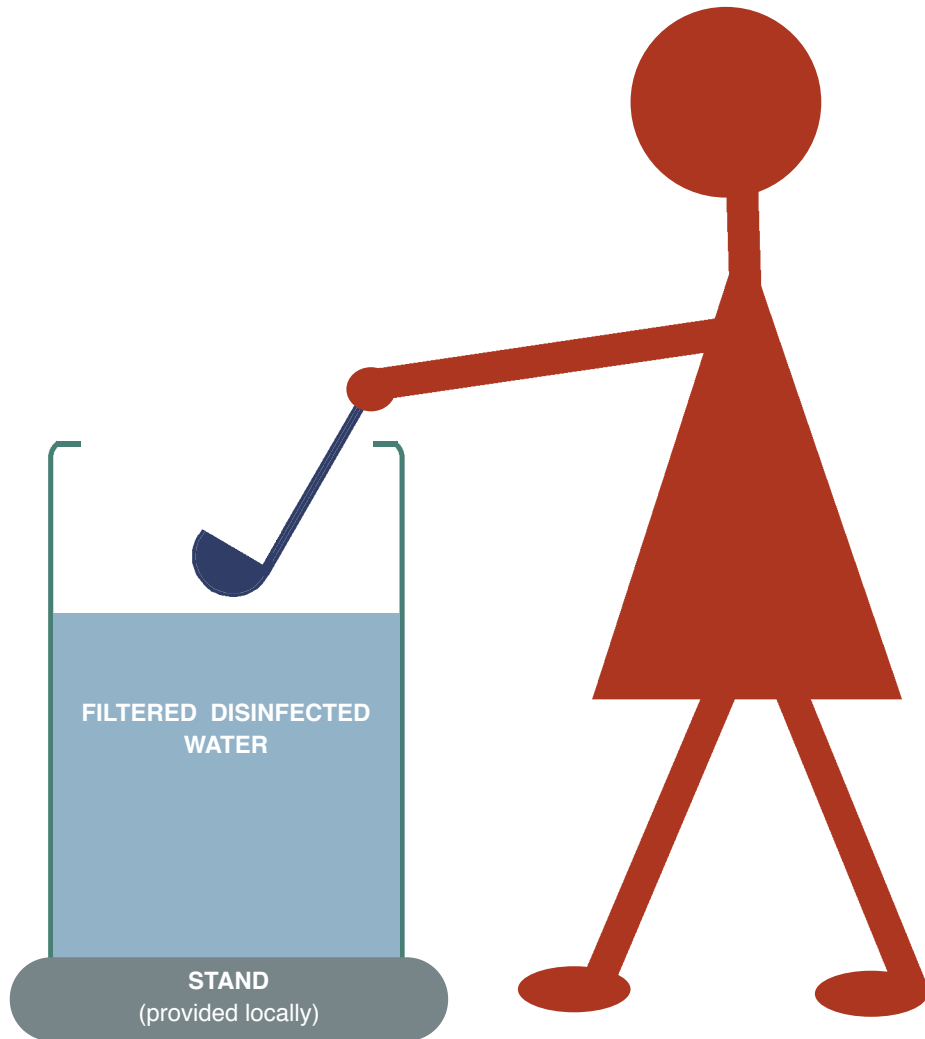

FILTER AND EXTRA LADLES
TEMPORARILY STORED ON
LID WHEN UNIT IS IN USE



POINT OF USE FAMILY WATER TREATMENT UNIT

Attachment A

*Step 5 – Protection of Filtered Water When Not in Use
(Not to Scale)*

LID REPLACED OVER CONTAINER

